



FO 5024

EIXO DA SATÉLITE (BRASEIXOS)
DIFERENCIAL PINION AXLE **TRAÇÃO SIMPLES**
EJE DEL ENGRENAJE SATELITE **E POSITIVA (93/)**



2SB.525.177 F-1000 5M Ø=19,05 C= 124,5

FO 5022

EIXO DA SATÉLITE (DANA 44/46)
DIFERENCIAL PINION AXLE
EJE DEL ENGRENAJE SATELITE



2SF-525 177 F1000 (68 / 98) Ø=19,05 C= 127,0

FO 5071

EIXO DA SATÉLITE
DIFERENCIAL PINION AXLE
EJE DEL ENGRENAJE SATELITE



BE2Y-4211 A F-4000 MODERNA Ø=28,5 C= 172,0

FO 5034

EIXO DA SATÉLITE
DIFERENCIAL PINION AXLE
EJE DEL ENGRENAJE SATELITE



BD5T-4211 A F-4000 ANTIGA Ø=25,33 C= 176,0

FO 8403

EIXO DA SATÉLITE (DANA 80)
DIFERENCIAL PINION AXLE
EJE DEL ENGRENAJE SATELITE



UH2185 F-4000 / CARGO 814/815 2000 / 02 Ø=28,5 C= 171,0

FO 8405

EIXO DA SATÉLITE (DANA 284/411)
DIFERENCIAL PINION AXLE
EJE DEL ENGRENAJE SATELITE



94.645.370 F-4000 .../1999 Ø=25,4 C= 175,8

FO 8404

EIXO DA SATÉLITE (DANA 284/411)
DIFERENCIAL PINION AXLE
EJE DEL ENGRENAJE SATELITE



UH2191 F-4000 (1999) Ø=28,5 C= 176,1

FO 8402

EIXO DA SATÉLITE (DANA 70)
DIFERENCIAL PINION AXLE
EJE DEL ENGRENAJE SATELITE



UH2179 F-250/350 (1999 / 02) Ø=28,56 C= 171,0

FO 5017

EIXO DO CÂMBIO
GEAR SHIFT AXLE
EJE DEL CAMBIO



8MTH-7111 F-600/4000 Ø=28,85 C= 315,0

FO 5135

PINO DE MOLA TRASEIRO (C/CABEÇA)
SPRING PIN REAR **ADAPTAÇÃO**
PASADOR DE RESORTE TRASERO



C2TZ-5780 F-600/750 (1972/84) Ø=31,67 C= 163

FO 5132

PINO DE MOLA DIANT./TRAS.
SPRING PIN FRONT/REAR **C/CABEÇA**
PASADOR DE RESORTE DELANTERO/TRASERO



S/N F-600/700/12000/22000ADAPTAÇÃO Ø=18,95 C= 135

FO 9009

PINO DE MOLA DIANT./TRAS.(CURTO)
SPRING PIN FRONT/FRONT **F-CARGO**
PASADOR DE RESORTE DELANT./DELANT.



E 4HT-5A-314 AA 1622/1730/2422/3530/4030 Ø=25,35 C= 155,5

FO 9010

PINO DE MOLA DIANT./DIANT.(LONGO)
SPRING PIN FRONT/FRONT **CARGO**
PASADOR DE RESORTE DELANT./DELANT.



E4HT-5A-314 BA 1622/1730/2422/3530/4030 Ø=25,33 C= 171,0

FO 5059

PINO DE MOLA DIANT./DIANT.
SPRING PIN FRONT/FRONT **P/ DESLIZANTE**
PASADOR DE RESORTE DELANTERO/DELANTERO



C5TA-5A-341 A F-600 13.000 A 21.000 Ø=12,65 C= 113

FO 5063

PINO DE MOLA DIANT./TRAS. Rosca 1/2" 20F
SPRING PIN FRONT/REAR
PASADOR DE RESORTE DELANTERO/TRASERO



BB9C-5465 F-100 1957 / 66 Ø=15,9 C= 93

FO 5056

PINO DE MOLA DIANT. (curto) Rosca 5/8" 18F
SPRING PIN FRONT SHORT
PASADOR DE RESORTE DELANTERO



21T-5465 F-350/600 Ø=19,0 C= 104

FO 5058

PINO DE MOLA DIANT./TRAS.
SPRING PIN FRONT/REAR
PASADOR DE RESORTE DELANTERO/TRASERO



C5TA-5A-314 A F-600/750 1971/ Ø=18,97 C= 105

FO 5062

PINO DE MOLA TRAS.
SPRING PIN REAR
PASADOR DE RESORTE TRASERO



59Y-5780 F-350 / 2.000 1948 / 72 Ø=18,95 C= 102

FO 5067

PINO DE MOLA TRAS.
SPRING PIN REAR
PASADOR DE RESORTE TRASERO



B7T-5780 F-4000 1975/ Ø=25,4 C= 110

FO 5057

PINO DE MOLA TRAS. (TIRANTE)
SPRING PIN REAR **AVARENTÃO**
PASADOR DE RESORTE TRASERO



C2TZ-5780 A F-600 13.000 A 21.000 1971/ Ø=31,65 C= 121

FO 5055

PINO DE MOLA TRAS.
SPRING PIN REAR
PASADOR DE RESORTE TRASERO



O1T-5780 F-600 1970/ Ø=25,4 C= 115

FO 5061

PINO DE MOLA TRASEIRO
SPRING PIN REAR
PASADOR DE RESORTE TRASERO



BD2Y-5780 F-350/2000 1971 Ø=19,0 C= 102,5