

**FO 5060****PINO DE MOLA TRASEIRO (RESSALTO)**

SPRING PIN REAR ALGEMA
PASADOR DE RESORTE GARGO/SAPÃO/PITBULL



BC2T-5969 A F-600 13.000 A F21.000 Ø=19,06 C= 127,5

FO 9011**PINO DE MOLA TRAS.(TIRANTE)**

SPRING PIN REAR
PASADOR DE RESORTE TRASERO



E5HT-5780 E F- CARGO Ø=31,6 C= 127

FO 5148**PINO TRAVA DO PINO DE MOLA**

SPRING PIN REAR
SEGURO PASADOR DE RESORTE 5/16" NF 24 F



B7T-5780-TRV F-4000 IDEM AO 4055 Ø=11 C= 51,0

FO 5065**PINO TRAVA DO PINO DE MOLA**

SPRING PIN REAR
SEGURO PASADOR DE RESORTE 3/8" 24 F



81T-5782 F-600 Ø=12,7 C= 57,0

FO 5064**PINO DE MOLA TRASEIRO**

SPRING PIN REAR
PASADOR DE RESORTE TRASERO



BB9C-5780 F-100/2000 57/66 F-350 1971/ Ø=19 C= 95

FO 5114**REPARO DO DIFERENCIAL (AÇO)**

DIFERENCIAL REPAIR STEEL
REPARACION DIFERENCIAL ACERO



BC7C-4658 E F-1000 Ø=19,3 Ø46,7 e=1,5 Ø=47 Ø=76 e=1,5

FO 5036**REPARO DO DIFERENCIAL (AÇO) 79/86**

DIFERENCIAL REPAIR STEEL TINKÃO
REPARACION DIFERENCIAL F-600/700



BD2T-4228/30 F11000/13000 Ø=27,6 Ø61,4e=1,5 Ø=67,6 Ø=103,8e=1,5

FO 5015**REPARO DO DIFERENCIAL (AÇO)**

DIFERENCIAL REPAIR - STEEL
REPARACION DIFERENCIAL ACERO



BSY-4228/30 F-350 Ø=20 Ø47 e=1,5 Ø=47,5 Ø=71,5 e=1,5

FO 5013**REPARO DO DIFERENCIAL (AÇO)**

DIFERENCIAL REPAIR STEEL
REPARACION DIFERENCIAL ACERO



BCOT-4228/30 F-600 Ø=26,0 Ø57,0e=1,5 Ø=63, Ø=95,0e=1,5

FO 5014**REPARO DO DIFERENCIAL (AÇO)**

DIFERENCIAL REPAIR STEEL
REPARACION DIFERENCIAL ACERO



B7A-4228/30 F-100 Ø=21,2 Ø44,7e=0,9 Ø=45,7 Ø=77,5e=0,9

FO 5115**REPARO DO DIFERENCIAL (AÇO)**

DIFERENCIAL REPAIR STEEL
REPARACION DIFERENCIAL ACERO



T-16.525.187 CARGO DIF. 240 Ø=31,1 Ø67,8e=1,5 Ø=72,2 110e=1,5

FO 8422**REPARO DO DIFERENCIAL (AÇO)**

DIFERENCIAL REPAIR STEEL DANA 284/411
REPARACION DIFERENCIAL ACERO



94.405.519 F-4000 ..1999 Ø=26,0 Ø57,0e=1,5 Ø=63, Ø=95,0e=1,5

FO 9241**REPARO DO DIFERENCIAL (AÇO)**

DIFERENCIAL REPAIR STEEL TRAÇADO
REPARACION DIFERENCIAL ACERO



TE 3.525.187 F-2422 / 2626 Ø=27,1 Ø61,9e=1,5 Ø=74,5 Ø=103 e=3,1

FO 5072**REPARO DO DIFERENCIAL**


DIFERENCIAL REPAIR STEEL (DANA 284/411)
REPARACION DIFERENCIAL ACERO



BE2Y-4228/30 F-4000 Ø=27,1 Ø61,9e=1,5 Ø=74,5 Ø=103 e=3,1

FO 5113**REPARO DO CÂMBIO**

REPAIR GEAR
REPARACION DE CAMBIO

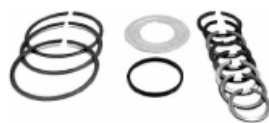

BTK2 F-4.000 4M. 1971.... /81

FO 5006**REPARO DO CÂMBIO**

REPAIR GEAR CAIXA CLARK
REPARACION DE CAMBIO



BD2T-7002 A F-600 5M.

FO 5001**REPARO DO CÂMBIO**

REPAIR GEAR
REPARACION DE CAMBIO



B6C-7002 B F-600 4M.

FO 5112**REPARO DO CÂMBIO**

REPAIR GEAR
REPARACION DE CAMBIO



BTK5 F-1000

FO 5007**REPARO DO CÂMBIO**

REPAIR GEAR
REPARACION DE CAMBIO



8L-7002 A F-100

FO 5026**SUPORTE DO CARDAN (PEQ.)**

SMALL CARDAN SUPPORT
SOPORTE CARDAN PEQ.



B5T-4880 A F-600/4000 TDS

FO 5068**SUPORTE DO CARDAN (MÉDIO)**

MEDIUM CARDAN SUPPORT
SOPORTE CARDAN MEDIO



CUTT-4808 B F-600/4000 TDS

FO 5116**SUPORTE DO CARDAN (GR.)**

LARGE CARDAN SUPPORT
SOPORTE CARDAN GDE.



TJ6.521.209 F-600/4000 TDS